


# Field of Armor

## 1/6th SCALE TIGER 1

### 18 TRACK LINK INSTRUCTIONS

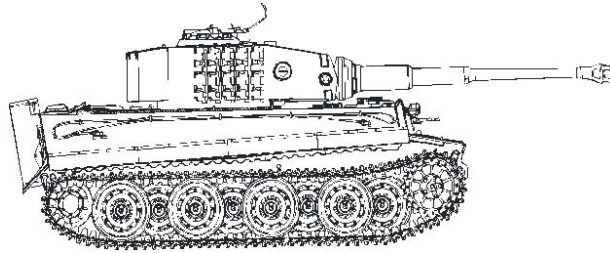

Items needed for construction:

- Ruler
- Pencil
- Drill, 1/16th inch drill bit
- Super Glue
- Pliers
- Sand Paper, 80 Grit

Optional Tools:

- Fine rotary tool (i.e., Dremel)
- Scraping knife

**IMPORTANT:** If you are planning to apply Zimmerit (Zimmerit Putty) to your Turret, do so before mounting the track links.

#### Mounting 5 Track Links on Turret Copula Side

Step 1: Align ruler along joint line between Front Turret Top Plate and Back Turret Top Plate. Scribe a line. From the scribed line, measure 1 inch from the scribed line back toward the Copula. Mark.



Step 2: Position the Top Link Mount on the backside of your 1 inch line.



Step 3: Outline the Top Link Mount. Using a Track link, dry fit where the Top Link Mount fits snug against the Link. (Note - The backside of the link with the long tine should be facing up.) Mark the top link mount hole on the top of the turret.



Step 4: On the marked hole, using a 1/16th drill bit, drill a hole all the way through the top turret plate. Align the Top Link Mount and screw one of the self-tapping screws into the hole. Do not glue the Top Link Mount at this time. Using a track link, align it with the Top Link Mount and position it straight up and down. Mark the location for the Link Pin Mount (white plastic piece).




### Important Notes:

-Lightly sand the backside of the Link Pin Mount before gluing it to the Turret.-If you have Zimmerit applied, like in the photo, align the Link Pin Mount and sketch around it. Then carefully remove the Zimmerit inside the sketched rectangle.

Step 5: With the Link Pin Mount's back facing up and the Hole side protruding out, glue Link Pin Mount to the turret. Mount the next top link mount ½ inch back from the first top link mount and repeat for the next links.

### Mounting 2 Track Links on Turret Ammunition Hatch Side

Step 6: Align ruler along joint line between Front Turret Top Plate and Back Turret Top Plate. Scribe a line. From the scribed line mark a line 1 inch from the scribed line back toward the Ammunition Hatch.

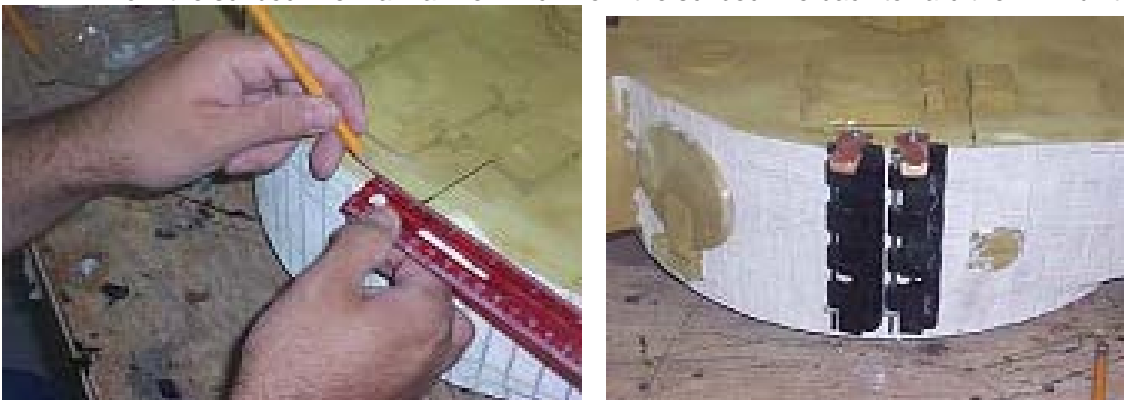

### Front Hull Mount

Step 7: From the front of the Hull, mark a line on both sides of the front Hull 3 1/8th inches down from the top, approximately 1/4 inch in from each side.



Step 8: Center the bar below the marked line. Scribe a line along the inside of the tab. Repeat on other side.



Step 9: Reposition the Hull Mount with the horizontal bar positioned along the scribe mark. Use the two ABS plastic end connectors to secure the horizontal bar in place. Insert the track links between the hull and the horizontal bar.



If you have any questions, contact us at: [anne@douglasmodels.com](mailto:anne@douglasmodels.com)